



Valve core replacement:

Step 1: Get the valve core removal tool and the new/replacement valve core ready.

Step 2: Turn anti clockwise to loosen the valve core and let the air out few minutes before removing the valve core completely.

Step 3: Remove the valve core after letting a bit of air escape (stated in step 2), beware that the valve core may fly out of your hands due to air pressure.

Step 4: Carefully insert the new valve core if the air is still rushing out.

Step 5: Tighten the replacement core in a clockwise direction with the valve core tool. Don't over tighten as it could damage the new valve core.

Step 6: Reinflate the tire and check for leaks.